


ChimneyCapDesign.com

No drilling or gluing. Insert base of the cap into chimney pipe, wrap stainless steel strap around cap base legs and tighten with provided bolt and nut. A stainless steel strap locks the cap down onto the base of the chimney and holds it in place preventing the wind from blowing it off.

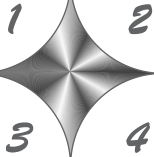

TO SAVE SHIPPING COST, THIS CAP MIGHT BE SHIPPED WITH UNMOUNTED HOOD. ASSEMBLE IT ACCORDINGLY WITH THIS PICTURE. YOU WILL NEED 1/2" WRENCH OR PLIERS.



SkyRider with CB (SRcb) installation